


# HUDSON VALVE, INC.


## 1" REPAIR KIT

Repair Kit Includes:

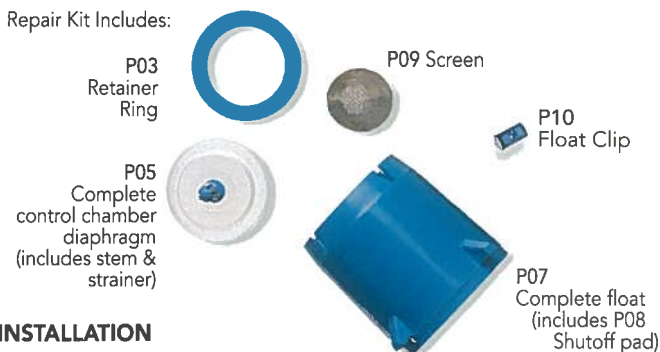

### INSTALLATION

- 1 Unscrew valve cap from valve body and remove old P03 and P05 from top section.
- 2 Place new P05 in circular groove and then place new P03 (flat side up) over P05 making sure that the P05 "skirt" is not smashed.
- 3 Replace valve cap by hand screwing back onto body of valve.
- 4 Remove float clip from bottom of valve body. To do so, turn valve body upside down and push clip down and out with flathead screwdriver.
- 5 Place new P07 into body using slotted guide alongside the inside of the body for one of the 4 P07 "fins". Replace float clip.
- 6 Gently tap the float up and down to make sure that it has freedom of movement.
- 7 Using a threadless piece of 3/4" pipe (either PVC or EMT) "punch" down the P09 screen in the top threaded section of the P01 valve cap after removing old screen (P09). This is best done off the valve so that dirt particles trapped in the old screen do not contaminate the repaired valve parts.

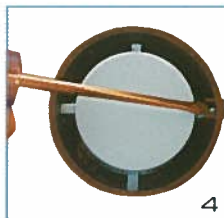

HUDSON VALVE, INC.

5301 Office Park Drive, Suite 330 • Bakersfield, CA 93309  
800-748-6218 • Fax 800-607-8731 • [www.hudsonvalve.com](http://www.hudsonvalve.com)