




**INSTALLATION INSTRUCTIONS -  
METRIC/IMPERIAL™ NORMAL GAUGE**

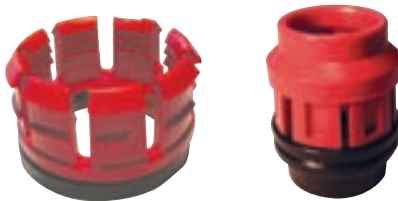

93002	93003	93004	93005	93006	93007
1/2"*	3/4"	1"	1-1/4"	1-1/2"	2"
3 part	2 part	3 part	3 part	3 part	2 part




1. Remove nut and retain.



2. Remove collet. This is no longer required.



3. Remove seal. This is no longer required.

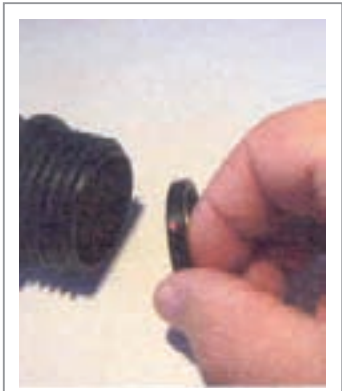

4. Insert NG seal. Marked with red dot for identification.



5. Fit collet into body of fitting. For 1/2", 1", 1-1/4". and 1-1/2" fit cap on the collet.



6. Replace cap. Leave two threads showing.



7. Insert pipe. Insert the pipe into the fitting to where the stop is felt.



8. Tighten by hand and then firmly with a wrench.

\* can also be used on 3/8" Low and High Density pipe